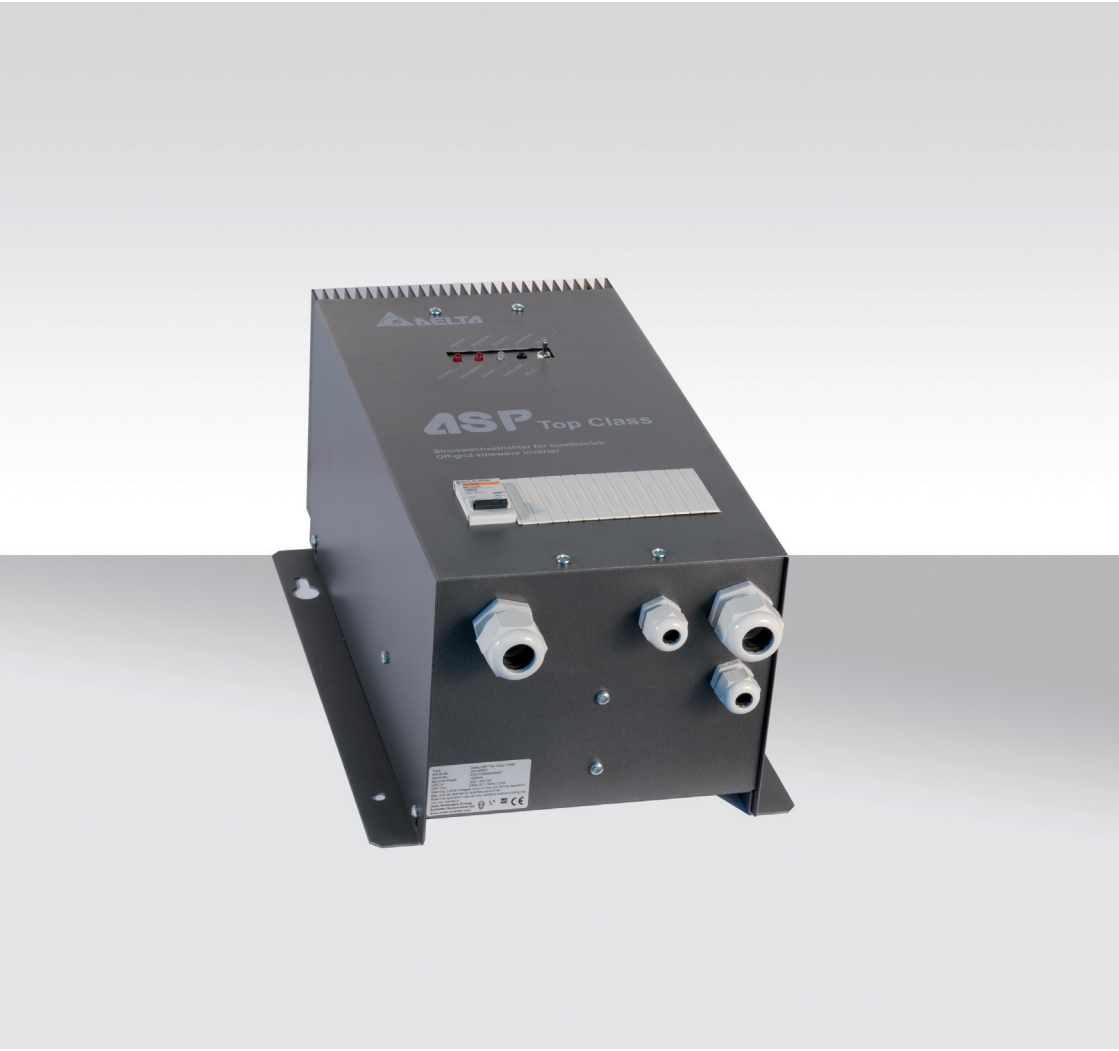

Operation and installation manual - ASP Top Class

Table of content

1	Scope of delivery	2
2	General warnings / Notes on safety	2
3	Unpacking the unit	5
4	Function, technology	5
5	General information	7
6	Installation	7
7	Connecting the inverter	8
8	Information´s for operation	9
9	Status LED-display	10
10	Fault clearance	12
11	Warranty (short form)	12
12	Technical Data Delta ASP Top Class 13/12	13
	Technical Data Delta ASP Top Class 20/12	14
	Technical Data Delta ASP Top Class 15/24	15
	Technical Data Delta ASP Top Class 22/24	16
	Technical Data Delta ASP Top Class 30/24	17
	Technical Data Delta ASP Top Class 22/48	18
	Technical Data Delta ASP Top Class 35/48	19
13	Glossary	20
14	Additional sheet for cable connections	21

1 Scope of delivery

• Delta ASP Top Class
• Operation and installation manual

2 General warnings / Notes on safety

Congratulations on your purchase of a Delta ASP Top Class sinewave inverter. You are the owner of the finest engineered and highest quality sinewave inverter. We have dedicated our products, our services and ourselves to the satisfaction of every customer.

This manual for installation and operation contains important information about this unit. Please familiarise yourself with all the information contained in these instructions before installing and operating this unit. This will help you to get acquainted properly with this unit and make full use of its advanced technical features under all operating conditions.
Should you encounter problems while installing or running this unit, please contact the dealer you purchased the unit from or a dealer authorised by Delta.
Improper assembly, installation and maintenance may impair the safety and function of this unit. For this reason make sure that you understand all the information in this manual before beginning the assembly and installation procedure.

Safety Symbols

Safety symbols mark passages in the text, which you absolutely need to read and consider.

- Consider these warnings
- Behave in such cases particularly carefully
- Inform other users about these dangers

Warning of dangerous electrical voltage
Ignoring this warning can lead to heavy bodily injury or to death.

Warning of a danger
Ignoring this warning can lead to heavy bodily injury or to damage.

Warning of hot surface
Ignoring this warning can lead to burns or to damage.

© Copyright – Delta Renewable Energy Systems (Switzerland) AG - All rights reserved.
This manual accompanies our equipment for use by the end users. The technical instructions and illustrations contained in this manual are to be treated as confidential and no part may be reproduced without the prior written permission of Delta Renewable Energy Systems (Switzerland) AG Service engineers and end users may not divulge the information contained herein or use this manual for purposes other than those strictly connected with correct use of the equipment. All information and specifications are subject to change without notice.

Safety Instructions

- In principle the general regulations for security and accident prevention are valid for operating and handling the inverter.
- The equipment was built and examined in accordance with the safety regulations for electrical devices. In order to guarantee a safe handling, the safety instruction must be considered, which are contained in this manual.
- For any works on equipment and electrical connections the national and regional regulations are valid concerning grounding, protective ground and lightning protection.
- Any Work on equipment and electrical connections may be carried out only by electrical specialists. An electrical specialist has the necessary technical training and knowledge to avoid dangers by electricity.

Warning! In this unit potential differences of up to 1000V occur during operation and can result in death or serious bodily injury. Use extreme caution while operating and always observe precautions as: The unit must be connected by a professional electrician only.

Only specially trained maintenance and service personnel are permitted to test and repair this unit. These personnel further must be familiar with this manual and all domestic regulations.

Safe handling of this inverter is only ensured by correct installation and mounting according to regional valid regulations. Carefully follow the lightning protection regulations!

Any work performed on this unit, its installation and electrical connection must be carried out in compliance with national electric codes and local regulations, which may deviate from those contained herein. Refer to responsible authorities for relevant information's.

No AC-generator or power supply is allowed to connect to this unit. Connecting mains power, AC-Generator or any other inverter to AC-output will damage the unit immediately. Excess voltage applied to the inputs and outputs may result in destruction of the unit. Charging the battery with a dynamo while the inverter is connected to the battery, the inverter may be damaged. Please ask your dealer if you have any questions.

Take care of regulations for lightning protection. The unit is tested by the manufacturer and it is not allowed to change anything! Without a written permission of Delta Renewable Energy Systems (Switzerland) AG you will lose warranty if you repair the unit. Please refer to the warranty information's.

Operate the device only when all factory-supplied covers are available and in place. Temperatures at the enclosure of the device may be as high as 80 degrees C during operation. Obstruction of the ventilation of the unit may result in overheating and thus in failure of the unit. Always keep the unit and the ventilation slots clean. Do not cover up or place any item on ventilation holes or cooling components.
Please note the permissible ambient conditions for operating the unit.

Automatic restart of the unit may occur after fault clearance.

Please note that also under standby operation, 230V test voltage pulses are present at the inverter AC-output. The inverter is still ready to run. To be sure that the unit is completely switched off, you have to switch the main circuit breaker in OFF-position or disconnect the battery.

Warning! Inbuilt, large electrolytic capacitors will hold DC-voltage for extended periods. Do not use any measuring equipment damaged or defective.

Contact with energised parts can result in serious or fatal injury. Please note that, even under excessively light load or in stand by operation, high voltage can be present at the AC-output.

Limitation of liability

Since neither the observance of these instructions for installation and operation, nor the conditions and methods of installation, operation, utilisation and maintenance of the unit can be supervised by Delta Renewable Energy Systems (Switzerland) AG, we don't assume any responsibility or liability for loss, damage or costs arising from using this unit or in any way connected with faulty installation, improper operation or incorrect utilisation and maintenance. Furthermore we don't assume any responsibility for infringement of patent rights or violations of the rights of third parties arising from the utilisation of this unit. We reserve the right to make product changes, change technical specifications or these instructions without prior notice.

Important: Please be informed that units without CE-declaration can only be used on your own liability in Europen countries. If you have a unit without CE please contact your local dealer.

WARNING! Unauthorized repairs and operation of this device for any use other than that for which it was intended will result in loss of warranty. If you have problems with the unit, Delta Renewable Energy Systems (Switzerland) AG will provide you with the authorization necessary to return or repair a unit.

Environmental protection
Recycling raw materials instead of waste disposal. This unit is built from valuable materials and is easy to recycle. The unit, accessories and packaging should be sorted for environment-friendly recycling. Please keep packaging for retransport the inverter later. To prevent damage during transport we have to use and bill you a new packaging if we receive the unit not with original packaging.

Maintenance and Spare parts
This unit is maintenance-free.
Proper functioning of the unit and electrical connections must be inspected at regular intervals – we recommend once a year – by trained electrical specialists. The routine inspection should include the entire electrical system.
Should malfunctions of the unit occur despite these inspections, the unit must be returned to the manufacturer for repair. Original spare parts are only available from Delta Renewable Energy Systems (Switzerland) AG. Delta Renewable Energy Systems (Switzerland) AG will provide you with the authorization necessary to return a unit for repair. Before you call please prepare you for the following questions: Type of unit, DC-voltage, manufacturing date, date of purchase, kind of fault, connected loads.

3 Unpacking the unit

Please check if the unit has no visible damage. If the unit is damaged you must inform your dealer within 3 days after receiving the unit.

4 Function, technology

This inverter is designed to convert DC-battery voltage (direct voltage) to 230V AC (sinusoidal alternating voltage). Voltage controlled, the inverter provides a stabilised, crystal-accurate alternating voltage (different voltages and frequencies refer to the indication label). With a sinewave inverter almost any type of electric consumer may be connected as for example energy saving lights, fluorescent tubes, computers, Radio and HIFI-equipement and other household appliances, freezers, pumps, motors etc. Due to a high degree built-in safety, excellent dynamic response, a surge-proof and overload-proof output, it is very simple to operate a broad range of applications.
The „heart“ of the inverter is a very powerful RISC-microprocessor of the latest generation. This microprocessor is responsible for the real time computing of the output sinewave shape, for the process control of the output voltage, for the supervision of the battery (dynamic) and the inverter temperature. The power stage features modern Power Mosfet transistors. These transistors are the key to the high partial-load efficiency and superb overload capability. The power transistors are protected by independent intelligent protection circuits. The inverter is further more protected against DC-overvoltage (static) and short circuit on AC-output. The battery input side is equipped with a thermal/magnetic circuit breaker for extreme overload protection of your system (Delta ASP Top Class 13/12, Delta ASP Top Class 20/12, Delta ASP Top Class 30/24 has no circuit breaker at the input).

Block diagram

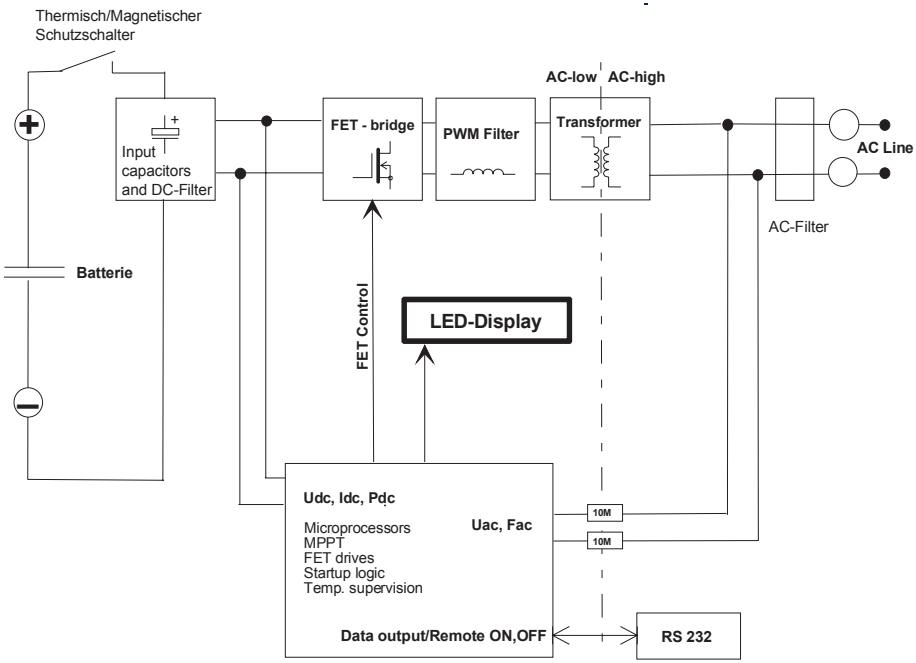

5 General information

Always check the power draw of your appliances. Electrical equipment as motors, pumps, compressors etc. need more power while starting up. Start up power draw can be much higher than Pnom. For this application the inverter is able to supply up to 300% surge power for a short time.
Be careful if you use pumps. Power declaration on pumps is normally not the electrical input power of the pump! The inverter switches off automatically if surge power is too high.
If ambient temperature is higher than 20 degrees C, Pnom and overload capability of the inverter will be reduced. Due to reduced cooling capacity Pnom of the inverter is reduced if operation altitude is above 900 m ASL. Reduction of Pnom is approx. 1.5% per every additional 100 m more altitude. Example: If a 1000 VA inverter is installed as high as 2500 m ASL maximal Pnom will be at 780VA only! If you use more power, overheating and associated premature disconnection of the inverter must be anticipated. If you use the inverter under above conditions we recommend using a bigger inverter.

6 Installation

Safety Instructions

- Be sure the points demanded under „safety regulations“ are obeyed.
- Install the unit in a dry place. The unit is not designed for outdoor use.

- Adequate ventilation. Keep min. 10cm distance to other objects (except mounting side). Do not cover heat sink!

The selection of a safe location for installing the inverter depends on the following criteria:

- Check indication label for correct DC-Voltage and AC-Voltage.
- The inverter can be used in any position.
- Protection from unauthorised access in particular of children’s.
- Dry, dust free surroundings (max. 95% humidity, not condensing).
- Short distance between battery and inverter. Use a grounded metal pipe to reduce RFI emission and to prevent surroundings of fire. The inverter should not be mounted in the same room as the batteries are (gas of the batteries during charging).
- Adequate ventilation. Keep min. 10cm distance to other objects (except mounting side).
- Battery capacity must be at least 200Ah. Using a smaller battery may reduce performance of the unit.
- If other DC-units are installed at the same battery, contact your dealer for more information’s
- Protection of inverter and battery from the effects of water.
- Temperature range –25°C to +50 degrees C.
- Only specially trained maintenance and service personnel are permitted to test this unit. These personnel further must be familiar with this manual and all domestic regulations before installing this unit.

7 Connecting the inverter

Safety Instructions

- Be sure the points demanded under „safety regulations“ are obeyed.
- Check whether the intended solar generator voltage corresponds properly with the type-label on the unit itself.
- Any electrical connections must be carried out by an electrical specialist.
- The large input capacitors may still be charged even if DC-cables are disconnected and DC-switches are in OFF position!

The DC-circuit breaker must be turned to OFF-Position. **Note:** Inbuilt, large capacitors will hold DC-Voltage for extended periods. They still can have DC-Voltage even when the switch is in off position and the DC-Cables are disconnected from the battery! First make AC-Connections. Connect your load with enclosed connector to the inverters AC-Output. An additional AC-Circuit breaker (size refer to datasheet) has to be installed. We recommend installing an earth leakage protector for protection of personnel. Please observe domestic regulations when making connections! Take care of correct grounding of the inverter and your equipment which is connected to the inverter. We recommend using an earth cable with minimum cross section of 50mm^2 to ground the inverter.
NOTE: Please exercise extreme care when connecting the unit to a battery. Otherwise the inverter or the battery could be damaged!

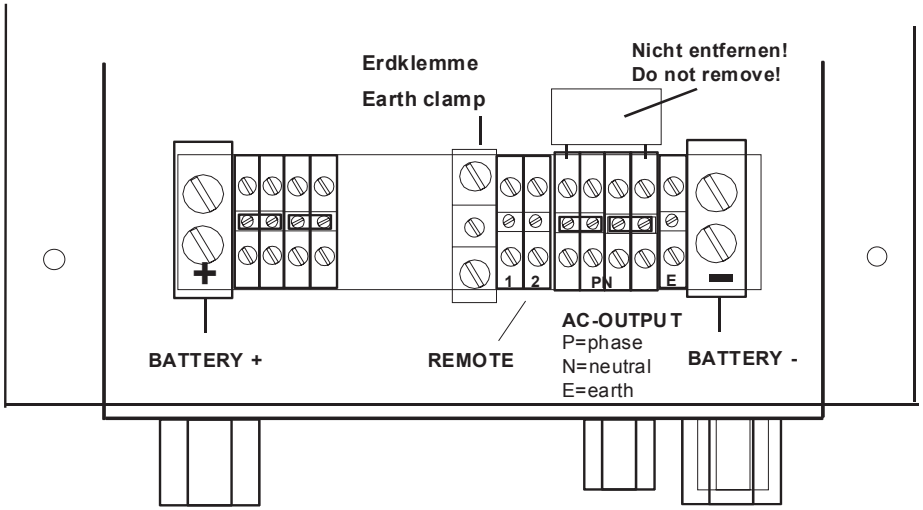

Take care of correct grounding of the inverter and your equipment that is connected to the inverter! We recommend using an earth cable with minimum cross section of 10mm^2 to ground the inverter. This will help to protect your unit in case of lightning. Be sure to meet all regulations about lightning protection! Check again to make sure all cables are securely connected. Switch on the DC-Circuit breaker. The inverter is now ready to operate.

8 Information's for operation

Security advices

- Be sure that all demands written in the topic „safety regulations" are kept.
- If DC voltage is out of range longer then 5 sec., the inverter switches off automatically, LED indication "LOW BATERY" flashes red. **Caution:** As soon as DC voltage is back in tolerance the inverter switches automatically on again.

- If AC voltage is out of range, LED indication "AC-OUTPUT" turns to red. The inverter switches off automatically and indication "AC-OUTPUT" flashes red. **Caution:** After approx. 20 sec. the inverter tries to switch on automatically again.
- Each time a fault occurs, the inverter restarts automatically after 20 seconds or if the parameters (for example temperature) are back in normal conditions after a fault. Time before the unit starts again can be from a few seconds to a few hours! Always switch off the unit if you work at your system or electric consumer.

- For any manipulations and works on the electrical facility or AC-load, always cut off the inverter from the battery (turn DC-switch rsp. circuit breaker to OFF position).
- Inverter heat sink may be very hot, do not touch surface to reduce the risk of burns.

Protect your inverter from rain. The unit is not designed to be used outdoor.

The DC-input breaker should be in „ON"-position all the time. In case of an error it will switch of automatically. If the inverter is switched off (by turning the potentiometer fully counter clockwise) it still needs app. 25mA from the battery. The inverter is electronically short circuit protected at the AC-Output. DC input of the inverter is monitored for over voltage and under voltage. The upper limit is static. If DC-Voltage is too high the inverter will switch off. Automatic restart follows after DC-Voltage is in the normal range. The lower limit is dynamic (cut off voltage is lower if a big load is in use). This allows an optimal use of the battery capacity and protects your battery during small load operation.
Important: If the inverter has switched off automatically it still needs very little power from the battery!
Important: Always before you switch on the circuit breaker you must switch off the load.
The fan is controlled by temperature and power needed. It is helping to reduce problems of overheating.

Delta ASP Top Class 35/48, 30/24 and 20/12 only: Three of these inverters are equipped with an alarm relays. This relays is switching before the inverter cuts off due to battery low voltage. With the potentiometer located at the main board you are able to adjust the level for battery low voltage switch off.

9 Status LED-display

Light emitting diode Low-battery:	Battery voltage low. The inverter switches off automatically if DC-Voltage is out of range for more than 5 seconds (LED is blinking). **Warning!** The inverter restarts automatically if DC-Voltage is in permitted range.
Light emitting diode Over-temperature:	Overtemperature. Overheating as a result of insufficient cooling or extended overload. The inverter switches off automatically after 5 seconds. **Warning!** The inverter restarts automatically if temperature is in permitted range.
Light emitting diode AC-output::	During normal operation this LED emits a green light. Inverter ON-Output = 230V AC/50Hz. During standby this LED blinks green. Hint: This LED blinks orange before the inverter switches to standby if the load is to small. Use this information to adjust the standby level to your load. If AC-Output transcends tolerance (for ex. because of short circuit at the AC-Output) this LED emits a red light. **Warning!** The inverter restarts automatically after 20 seconds.
Standby adjust:	With this potentiometer placed next to the LED‘s you can adjust standby level in a range from app. 4 – 40 W or you can switch the inverter to continual operation. Turn the potentiometer completely counter clockwise: The inverter is always ON – no sleep mode. Turning the potentiometer clockwise: The standby level (for sleep mode) will increase from app. 4 W to 40 W (see hint).

Important: Each time a fault occurs, the inverter restarts automatically after 20 seconds or if the parameters (for example temperature) are back in normal conditions after a fault. Time before the unit starts again can be from a few seconds to a few hours! Always switch off the unit if you work at your system or electric consumer.

Additional information about standby/sleep mode

This specially designed standby circuit (energy saving circuit) recognizes automatically if power is needed at the AC-Output.

If no power is needed, after a delay of 10 seconds the unit switches into standby/sleep mode. In this operation mode power draw of the unit is less than 2W. Every 800ms the inverter checks the AC-Output by emulating a true sinewave voltage. If power draw exceeds the adjusted sensitivity level the inverter switches on immediately. If no more power is needed the inverter switches back to standby mode after a delay of 10 seconds.

If you use a small not compensated load it may occur that the inverter is switching on and off all the time. If this occurs you should compensate the load or switch an additional load to the AC-output.

Note: A lot of electrical equipment needs power even if they are switched off. Especially units as portable radios TV- and video equipment, plug in power supplies etc. may have still such a high power draw that the inverter recognizes a load and is not able to switch into standby/sleep mode.

The sense level is adjustable on the potentiometer next to the LED's. You can adjust sensitivity level from app. 4W to 40 W. Sensitivity level may slightly change depending on DC-Voltage of the battery and temperature of the inverter (app. ± 2W).

Units with remote input:

- If your inverter is equipped with remote ON/OFF control use the clamps 1 and 2 to connect an external switch to the unit. These ports are electrically separated from the unit. The max. length of the wire should not exceed 20 m. The minimum size of the wire is 0.25 mm^2. Do not connect to power supply!

10 Fault clearance

Safety Instructions

- Be sure that all demands written in the topic „safety regulations“ are kept.
- Before any manipulations and works on the electrical facility or load, always cut off the inverter from the battery (turn DC-switch rsp. circuit breaker to OFF position).
- Please note when opening inverter housing:
  - Inside the inverter dangerous electrical tensions are accessible.
  - Do not disconnect ground wire connection to the housing cover.
- Repair works and service on the inverter unit may be only carried out by the manufacturer or an official Delta service partner.

AC-Output LED is flashing red an green	Refer to point LED -Display.
The unit is noisy and switches off	The load is to big, battery is to small.
It is not possible to set DC-Circuit breaker in ON-Position	Wrong polarity at DC-input, wrong installation,
DC-Circuit breaker switches to OFF-Position	Overload operation for long time, reduce load.
No function	Check wiring, check DC-Voltage.

11 Warranty (short form)

Dear Customer,

Thank you for buying this Delta product.
In the event that your Delta product needs guarantee service you should return it to the retailer from whom it was purchased. We guarantee Delta ASP Allegro appliances in accordance with statutory/ country-specific regulations (proof of purchase by invoice or delivery note). Damage attributable to normal wear and tear, overload or improper handling will be excluded from the guarantee. In case of complaint please send the unit with the original packaging, undismantled to your dealer or a Delta service centre for inverters. Please be aware of the information we need to repair the unit as soon as possible (page 5, Maintenance and Spare parts).
Delta Renewable Energy Systems (Switzerland) AG is not responsible for costs arising for transport of the unit or damage that occur if the unit is out of service. If you wish we will send you our complete documentation about our guarantee terms.

12 Technical Data: Delta ASP Top Class 13/12

INPUT (DC)

Rated Voltage $U_{DC\ IN}$	12 V
Input Voltage Range U_{DC}	10.5 ... 16.0 V
Dynamic Low Voltage Cut Off U_{DC}	10.5 ... 9.0 V
Rated current $I_{DC\ IN}$	125 A
Current $I_{DC\ IN}$ max.	340 A

OUTPUT (AC)

Rated Output Current $I_{AC\ Out}$	5.7 A
Short Circuit Current $I_{AC\ K}$ (max. 0.5s)	16 A
Rated Power P_{10} (10 min at T_A= 20°C)[1)]	1400 VA
Rated Power P_{30} (30 min at T_A=20°C)[1)]	1300 VA
Continuous P_D[1)]	1000 VA
Rated Output Voltage $U_{AC\ Out}$	230 V ± 2 %
Output Frequency f_{AC}	50 Hz ± 0.5 % (true sin-ewave)
Power factor CosPhi	0.3 ... 1

GENERAL SPECIFICATION

Model name	Delta ASP Top Class 13/12
Dimensions (L x W x H)	385 x 260 x 182 mm
Weight	15.5 kg
Efficiency Factor max.	92 %
Adjustable Standby Level (logarithmic)	5 ... 60 W
Consumption Standby/OFF	ca. 0.5 W / 0 W
Consumption 230V_{AC} OK	10 W
Remote control ON / OFF	yes, with external switch (master)
IP Protection	IP20
Status indication	LED
Reset after short circuit	every 60s
Reset after overload	every 60s
Reset after overtemperature	automatically after reaching semiconductor temp. +45ºC
Reset after battery failure	automatically after reaching $U_{DC\ IN}$
Ambient temperature range	-25°C ... +50°C (max. 95 % rH, non-condensing)
Toroidal transformer (galvanically isolated)	ON 55 °C / OFF 45 °C, P_D> 80 %
Warranty	EN61558 (IEC61558)
Certificate	2 years
Zertifikat	CE

1)This values correspond to rated voltage 12 V DC

Technical Data: Delta ASP Top Class 20/12

INPUT (DC)

Rated Voltage $U_{DC\ IN}$	12 V
Input Voltage Range U_{DC}	10.5 ... 16.0 V
Dynamic Low Voltage Cut Off U_{DC}	10.5 ... 9.0 V
Rated current $I_{DC\ IN}$	195 A
Current $I_{DC\ IN}$ max.	520 A

OUTPUT (AC)

Rated Output Current $I_{AC\ Out}$	8.7 A
Short Circuit Current $I_{AC\ K}$ (max. 0.5s)	24 A
Rated Power P_{10} (10 min at T_A= 20°C)[1)]	2300 VA
Rated Power P_{30} (30 min at T_A=20°C)[1)]	2000 VA
Continuous P_D[1)]	1800 VA
Rated Output Voltage $U_{AC\ Out}$	230 V ± 2 %
Output Frequency f_{AC}	50 Hz ± 0.5 % (true sin-ewave)
Power factor CosPhi	0.3 ... 1

GENERAL SPECIFICATION

Model name	Delta ASP Top Class 20/12
Dimensions (L x W x H)	456 x 320 x 211 mm
Weight	20 kg
Efficiency Factor max.	93 %
Adjustable Standby Level (logarithmic)	5 ... 60 W
Consumption Standby/OFF	ca. 0.5 W / 0 W
Consumption 230V_{AC} OK	16 W
Remote control ON / OFF	yes, with external switch (master)
IP Protection	IP20
Status indication	LED
Reset after short circuit	every 60s
Reset after overload	every 60s
Reset after overtemperature	automatically after reaching semiconductor temp. +45ºC
Reset after battery failure	automatically after reaching $U_{DC\ IN}$
Ambient temperature range	-25°C ... +50°C (max. 95 % rH, non-condensing)
Temperature and load controlled fan	ON 55 °C / OFF 45 °C, P_D> 80 %
Alarm contact (insulated relay contact)	yes
Toroidal transformer (galvanically isolated)	EN61558 (IEC61558)
Warranty	2 years
Certificate	CE

1)This values correspond to rated voltage 12 V DC

Technical Data: Delta ASP Top Class 15/24

INPUT (DC)

Rated Voltage $U_{DC\ IN}$	24 V
Input Voltage Range U_{DC}	21.0 ... 32.0 V
Dynamic Low Voltage Cut Off U_{DC}	21.0 ... 18.0 V
Rated current $I_{DC\ IN}$	72 A
Current $I_{DC\ IN}$ max.	140 A

OUTPUT (AC)

Rated Output Current $I_{AC\ Out}$	6.5 A
Short Circuit Current $I_{AC\ K}$ (max. 0.5s)	16 A
Rated Power P_{10} (10 min at T_A= 20°C)[1)]	1700 VA
Rated Power P_{30} (30 min at T_A=20°C)[1)]	1500 VA
Continuous P_D[1)]	1200 VA
Rated Output Voltage $U_{AC\ Out}$	230 V ± 2 %
Output Frequency f_{AC}	50 Hz ± 0.5 % (true sin-ewave)
Power factor CosPhi	0.3 ... 1

GENERAL SPECIFICATION

Model name	Delta ASP Top Class 15/24
Dimensions (L x W x H)	385 x 260 x 182 mm
Weight	16 kg
Efficiency Factor max.	93 %
Adjustable Standby Level (logarithmic)	5 ... 60 W
Consumption Standby/OFF	ca. 0.5 W / 0 W
Consumption 230V_{AC} OK	12 W
DC- Breaker / fuse	100 A
Remote control ON / OFF	yes, with external switch (master)
IP Protection	IP20
Status indication	LED
Reset after short circuit	every 60s
Reset after overload	every 60s
Reset after overtemperature	automatically after reaching semiconductor temp. +45ºC
Reset after battery failure	automatically after reaching $U_{DC\ IN}$
Ambient temperature range	-25°C ... +50°C (max. 95 % rH, non-condensing)
Temperature and load controlled fan	ON 55 °C / OFF 45 °C, P_D> 80 %
Toroidal transformer (galvanically isolated)	EN61558 (IEC61558)
Warranty	2 years
Certificate	CE

1)This values correspond to rated voltage 24 V DC

Technical Data: Delta ASP Top Class 22/24

INPUT (DC)

Rated Voltage $U_{DC\ IN}$	24 V
Input Voltage Range U_{DC}	21.0 ... 32.0 V
Dynamic Low Voltage Cut Off U_{DC}	21.0 ... 18.0 V
Rated current $I_{DC\ IN}$	110 A
Current $I_{DC\ IN}$ max.	205 A

OUTPUT (AC)

Rated Output Current $I_{AC\ Out}$	9.6 A
Short Circuit Current $I_{AC\ K}$ (max. 0.5s)	24 A
Rated Power P_{10} (10 min at T_A= 20°C)[1)]	2900 VA
Rated Power P_{30} (30 min at T_A=20°C)[1)]	2200 VA
Continuous P_D[1)]	2000 VA
Rated Output Voltage $U_{AC\ Out}$	230 V ± 2 %
Output Frequency f_{AC}	50 Hz ± 0.5 % (true sin-ewave)
Power factor CosPhi	0.3 ... 1

GENERAL SPECIFICATION

Model name	Delta ASP Top Class 22/24
Dimensions (L x W x H)	456 x 320 x 211 mm
Weight	20 kg
Efficiency Factor max.	93 %
Adjustable Standby Level (logarithmic)	5 ... 60 W
Consumption Standby/OFF	ca. 0.5 W / 0 W
Consumption 230V_{AC} OK	12 W
Remote control ON / OFF	125 A
IP Protection	yes, with external switch (master)
Status indication	IP20
Reset after short circuit	LED
Reset after overload	every 60s
Reset after overtemperature	every 60s
Reset after battery failure	automatically after reaching semiconductor temp. +45ºC
Ambient temperature range	automatically after reaching $U_{DC\ IN}$
Temperature and load controlled fan	-25°C ... +50°C (max. 95 % rH, non-codensing)
Temperatur- und Lastgesteuerter Lüfter	ON 55 °C / OFF 45 °C, P_D> 80 %
Toroidal transformer (galvanically isolated)	EN61558 (IEC61558)
Warranty	2 years
Certificate	CE

1)This values correspond to rated voltage 24 V DC

Technical Data: Delta ASP Top Class 30/24

INPUT (DC)

Rated Voltage $U_{DC\ IN}$	24 V
Input Voltage Range U_{DC}	21.0 ... 32.0 V
Dynamic Low Voltage Cut Off U_{DC}	21.0 ... 18.0 V
Rated current $I_{DC\ IN}$	150 A
Current $I_{DC\ IN}$ max.	340 A

OUTPUT (AC)

Rated Output Current $I_{AC\ Out}$	13 A
Short Circuit Current $I_{AC\ K}$ (max. 0.5s)	35 A
Rated Power P_{10} (10 min at T_A= 20°C)[1)]	3200 VA
Rated Power P_{30} (30 min at T_A=20°C)[1)]	3000 VA
Continuous P_D[1)]	2700 VA
Rated Output Voltage $U_{AC\ Out}$	230 V ± 2 %
Output Frequency f_{AC}	50 Hz ± 0.5 % (true sin-ewave)
Power factor CosPhi	0.3 ... 1

GENERAL SPECIFICATION

Model name	Delta ASP Top Class 30/24
Dimensions (L x W x H)	456 x 320 x 211 mm
Weight	27 kg
Efficiency Factor max.	94 %
Adjustable Standby Level (logarithmic)	5 ... 60 W
Consumption Standby/OFF	ca. 0.5 W / 0 W
Consumption 230V_{AC} OK	22 W
Remote control ON / OFF	yes, with external switch (master)
IP Protection	IP20
Status indication	LED
Reset after short circuit	every 60s
Reset after overload	every 60s
Reset after overtemperature	automatically after reaching semiconductor temp. +45ºC
Reset after battery failure	automatically after reaching $U_{DC\ IN}$
Ambient temperature range	-25°C ... +50°C (max. 95 % rH, non-condensing)
Temperature and load controlled fan	ON 55 °C / OFF 45 °C, P_D> 80 %
Alarm contact (insulated relay contact)	yes
Toroidal transformer (galvanically isolated)	EN61558 (IEC61558)
Warranty	2 years
Certificate	CE

1)This values correspond to rated voltage 24 V DC

Technical Data: Delta ASP Top Class 22/48

INPUT (DC)

Rated Voltage $U_{DC\ IN}$	48 V
Input Voltage Range U_{DC}	42.0 ... 64.0 V
Dynamic Low Voltage Cut Off U_{DC}	42.0 ... 36.0 V
Rated current $I_{DC\ IN}$	54 A
Current $I_{DC\ IN}$ max.	96 A

OUTPUT (AC)

Rated Output Current $I_{AC\ Out}$	9,6 A
Short Circuit Current $I_{AC\ K}$ (max. 0.5s)	16 A
Rated Power P_{10} (10 min at T_A= 20°C)[1)]	2700 VA
Rated Power P_{30} (30 min at T_A=20°C)[1)]	2200 VA
Continuous P_D[1)]	2000 VA
Rated Output Voltage $U_{AC\ Out}$	230 V ± 2 %
Output Frequency f_{AC}	50 Hz ± 0.5 % (true sin-ewave)
Power factor CosPhi	0.3 ... 1

GENERAL SPECIFICATION

Model name	Delta ASP Top Class 22/48
Dimensions (L x W x H)	456 x 320 x 211 mm
Weight	20 kg
Efficiency Factor max.	93 %
Adjustable Standby Level (logarithmic)	5 ... 60 W
Consumption Standby/OFF	ca. 0.5 W / 0 W
Consumption 230V_{AC} OK	12 W
DC- Breaker / fuse	80 A
Remote control ON / OFF	yes, with external switch (master)
IP Protection	IP20
Status indication	LED
Reset after short circuit	every 60s
Reset after overload	every 60s
Reset after overtemperature	automatically after reaching semiconductor temp. +45ºC
Reset after battery failure	automatically after reaching $U_{DC\ IN}$
Ambient temperature range	-25°C ... +50°C (max. 95% rH, non-condensing)
Temperature and load controlled fan	ON 55 °C / OFF 45 °C, P_D> 80 %
Toroidal transformer (galvanically isolated)	EN61558 (IEC61558)
Warranty	2 years
Certificate	CE

1) This values correspond to rated voltage 48 V DC

Technical Data: Delta ASP Top Class 35/48

INPUT (DC)

Rated Voltage $U_{DC\ IN}$	48 V
Input Voltage Range U_{DC}	42.0 ... 64.0 V
Dynamic Low Voltage Cut Off U_{DC}	42.0 ... 36.0 V
Rated current $I_{DC\ IN}$	80 A
Current $I_{DC\ IN}$ max.	210 A

OUTPUT (AC)

Rated Output Current $I_{AC\ Out}$	15.6 A
Short Circuit Current $I_{AC\ K}$ (max. 0.5s)	24 A
Rated Power P_{10} (10 min at T_A= 20°C)[1)]	3900 VA
Rated Power P_{30} (30 min at T_A=20°C)[1)]	3500 VA
Continuous P_D[1)]	3200 VA
Rated Output Voltage $U_{AC\ Out}$	230 V ± 2 %
Output Frequency f_{AC}	50 Hz ± 0.5 % (true sin-ewave)
Power factor CosPhi	0.3 ... 1

GENERAL SPECIFICATION

Model name	Delta ASP Top Class 35/48
Dimensions (L x W x H)	456 x 320 x 211 mm
Weight	30 kg
Efficiency Factor max.	93 %
Adjustable Standby Level (logarithmic)	4 ... 40 W
Consumption Standby/OFF	ca. 0.5 W / 0 W
Consumption 230V_{AC} OK	12 W
DC- Breaker / fuse	100 A
Remote control ON / OFF	yes, with external switch (master)
IP Protection	IP20
Status indication	LED
Reset after short circuit	every 60s
Reset after overload	every 60s
Reset after overtemperature	automatically after reaching semiconductor temp. +45ºC
Reset after battery failure	automatically after reaching $U_{DC\ IN}$
Ambient temperature range	-25°C ... +50°C (max. 95 % rH, non-condensing)
Temperature and load controlled fan	ON 55 °C / OFF 45 °C, P_D> 80 %
Alarm contact (insulated relay contact)	yes
Toroidal transformer (galvanically isolated)	EN61558 (IEC61558)
Warranty	2 years
Certificate	CE

1) This values correspond to rated voltage 48 V DC

13 Glossary

AC
Abbreviation for „Alternating Current“.

ASP
Advanced Solar Products

CE
With the CE identification code, the manufacturer confirms the conformity of the product with the valid EC Guideline and compliance with the significant requirements stipulated therein.

DC
Abbreviation for „Direct Current“.

True sinusoidal wave
The public electrical grid has a sine-shaped voltage flow which is designated as sinusoidal voltage. Our devices recreate this sinusoidal voltage and provide the consumers with the same or better quality of sinusoidal voltage as the public electricity grid.

Galvanic isolation
A galvanic isolation exists between the DC-side (direct current side) and the AC-side (alternating current side) which is realised by a 50Hz toroidal transformer.

High degree of efficiency
The selection of high-quality components allows for an extremely high degree of efficiency and thus reduces losses to a minimum.

Inverter
Is an electrical device which converts DC direct voltage into AC voltage and/or direct current into alternating current.

Overload and short-circuit proof
Delta´s ASP inverters stand for robust use and can be used for any application.

VDE
Verband der Elektrotechnik, Elektronik und Informationstechnik e. V.
(Association of Electrical Engineering, Electronics and Information Technology).

14 Additional sheet for cable connections

View of clamp on C-rail

Direct voltage (DC)

+ = Battery plus (+)
- = Battery minus (-)

Remote

1 = Remote off-control
2 = Remote off-control

Alternating voltage (AC)

P = phase
N = neutral
E = earth

Delta ASP Top Class 20/12

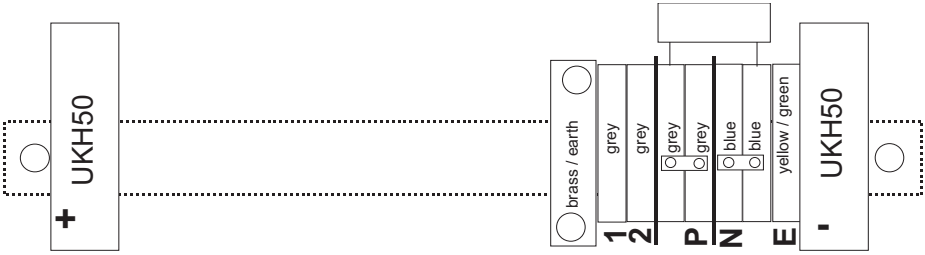

Delta ASP Top Class 13/12

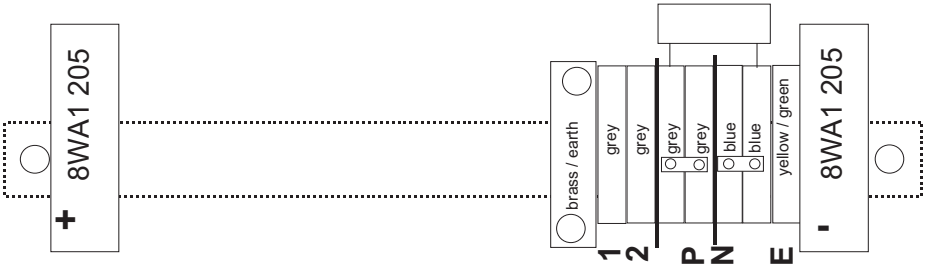

Delta ASP Top Class 15/24

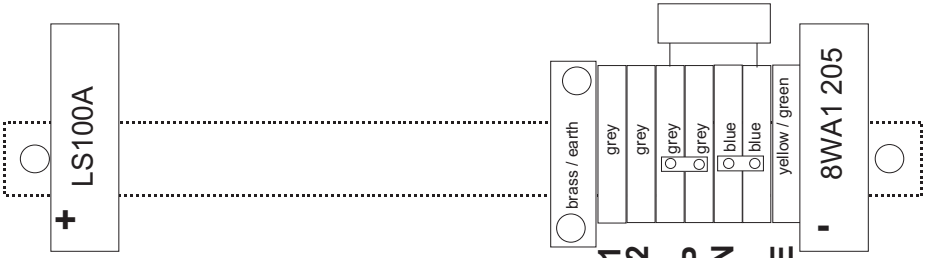

Delta ASP Top Class 22/24

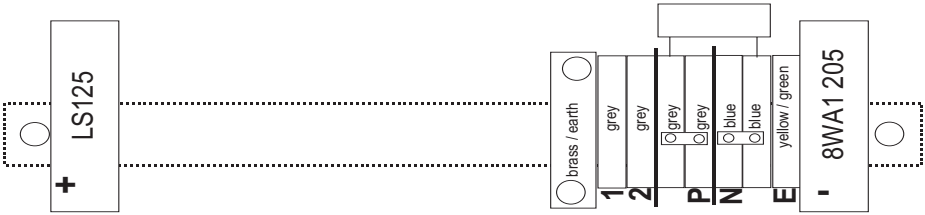

Delta ASP Top Class 30/24

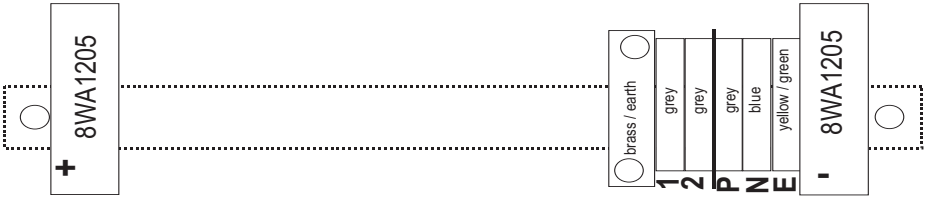

Delta ASP Top Class 22/48

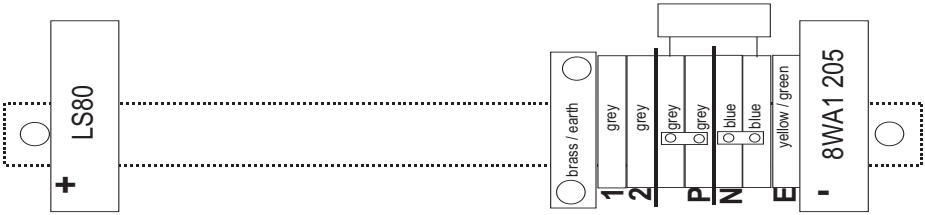

Delta ASP Top Class 35/48

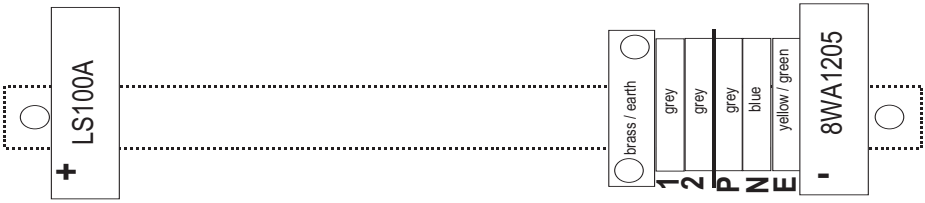

Delta Energy Systems (Germany) GmbH
Tscheulinstrasse 21
79331 Teningen
GERMANY
Support Email: support@solar-inverter.com
Support Hotline: +49 180 16 SOLAR (76527)
Mondays to Fridays from 8 am to 5 pm (CET - apart from offical Bank Holidays) (3,9 ct/min)

Delta Renewable Energy Systems (Switzerland) AG
Burgerfeldstrasse 19
8730 Uznach/SG
SWITZERLAND
Support Email: support.switzerland@solar-inverter.com

www.solar-inverter.com

06 October 2011